











 




 



 







 

 






Original	Replacement
	
Power	Power
	
Stop	Stop
	
Pause	Pause
	
Rec	Rec
	
<<	<<
	
Play	Play
	
>>	>>
	
*	Menu
	
Search	TV/R
	
Bluetooth	Pre Ch
	
TV Guide	Guide
	
List	List
	
Sources	AV
	
Smart Tv	Smart
	
Home	Shift + Smart
	
Exit/TV	Exit
	
Red	Red

Original	Replacement
	
Green	Green
	
Yellow	Yellow
	
Blue	Blue
	
Info	Info
	
Options	Options
	
←/Back	Back
	
[<>]/Format	Format
	
Up	Up
	
Down	Down
	
Right	Right
	
Left	Left
	
OK	Ok
	
Vol+	Vol +
	
Vol-	Vol -
	
Mute	Mute
	
Netflix	Media
	
CH+	Ch +





	Original	Replacement		Original	Replacement
		CH -			Ch -
		1			1
		2			2
		3			3
		4			4
		5			5
		6			6
		7			7
		8			8
		9			9
		0			0
		Subtitle			Subt
		Text			Text

