 




 


 



 







 
 

 

 
 

 



 
 

 
 

 
 

 


 


 





 





 
 


 








Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol +
	[≡]		Text		Vol -		Vol -
	16:9		Format		P +		Ch +
	Mute		Mute		P -		Ch -
	Red		Red		1		1
	Green		Green		2		2
	Yellow		Yellow		3		3
	Blue		Blue		4		4
	Digital		Smart		5		5
	Up		Up		6		6
	Left		Left		7		7
	OK		Ok		8		8
	Right		Right		9		9
	Down		Down		0		0
	TV		TV/R		Recall		Pre Ch
	Exit		Exit		CH Guide		Guide
	Menu		Menu		[≡i] / Help		Options
















 






 
 


 

 
 


 




 




 


 




Original		Replacement		Original		Replacement	
	[....]		Subt				
	[=□] / [▶ ◀]		Stop				
	Input		AV				
	[≡?] / ((↔))		Media				
	[≡X] / ⊖		Shift + Exit				
	[≡⇕] / Info		Info				
	Lang I-II		Dual				





Original		Replacement		Original		Replacement	
	Power		Power		7		7
	Viewlink VCR REC		Rec		8		8
	Play		Play		9		9
	<<		<<		0		0
	Pause		Pause		Input		AV
	>>		>>		Lang I-II		Dual
	Stop		Stop				
	TV		Smart				
	Menu		Menu				
	P +		Ch +				
	P -		Ch -				
	1		1				
	2		2				
	3		3				
	4		4				
	5		5				
	6		6				

