 
 












 



Original		Replacement		Original		Replacement	
	Power		Power		Vol +		Vol +
	Input		AV		Vol -		Vol -
	TV / TXT		Text		Menu		Menu
	Cancel		Shift + Exit		Mute		Mute
	Reveal		Smart		Up		Up
	Nicom / A2		Options		Left		Left
	Hold		Stop		OK		Ok
	Size		Format		Right		Right
	Subpage		Shift + Subt		Down		Down
	Index		Shift + Info		DVB		Media
	Red / TV/Radio		Red		Exit		Exit
	Red / TV/Radio		TV/R		1		1
	Green		Green		2		2
	Yellow		Yellow		3		3
	Blue		Blue		4		4
	CH +		Ch +		5		5
	CH -		Ch -		6		6





Original	Replacement
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Shift + Guide
 Recall	 Back
 Picture	 Shift + Format
 Sound	 Shift + Dual
 Sleep	 Sleep
 Subtitle	 Subt
 Language	 Dual
 Display / Info	 Info
 Zoom	 Eject
 Text	 Shift + Text
 FAV	 Pre Ch
 EPG	 Guide
 FAV -	 I<<

Original	Replacement
 FAV +	 >>I

