




 








 



 



 


 

 

 


 
 
 

 
 

 








Original		Replacement		Original		Replacement	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	Play		Play		1		1
	Pause		Pause		2		2
	<<		<<		3		3
	>>		>>		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	Rec		Rec		7		7
	Stop		Stop		8		8
	CH+		Ch +		9		9
	CH-		Ch -		0		0
	Up		Up		EPG		Guide








 








 








 

 




 
 
 





 
 

 


 









 






Original		Replacement		Original		Replacement	
	Back		Back				
	Media		Media				
	USB		Smart				
	Tv/Radio		TV/R				
	Audio		Dual				
	TTX		Text				
	Timer		AV				
	FAV		Pre Ch				
	Res		3D				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





Original		Replacement		Original		Replacement	
	Standby		Power		Down		Down
	Info		Info		Right		Right
	Subtitle		Subt		Left		Left
	Mute		Mute		OK		Ok
	I<<		I<<		Vol+		Vol +
	>>I		>>I		Vol-		Vol -
	<<		<<		EPG		Smart
	>>		>>		Back		Back
	Play		Play		1		1
	Pause		Pause		2		2
	Record		Rec		3		3
	Stop		Stop		4		4
	Menu		Menu		5		5
	Exit		Exit		6		6
	CH+		Ch +		7		7
	CH-		Ch -		8		8
	Up		Up		9		9





Original		Replacement		Original		Replacement	
	0		0				
	Media		Media				
	USB		Options				
	Tv/Radio		TV/R				
	Audio		Dual				
	TTX		Text				
	FAV		Pre Ch				
	Timer		AV				
	Res		Guide				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				

