













 



 













































 







 
 






 








Original	Replacement	Original	Replacement
 Power	 Power	 10+	 Guide / EPG / -/-
 Mute	 Mute / Dimmer	 Zoom	 Zoom / Size
 EQ	 Subtitle / EQ	 TV Mode	 Shift + 1
 1	 1	 I<<	 I<< / Preset-
 2	 2	 >>I	 >>I / Preset+
 3	 3	 Stop	 Stop / Hold
 VFD	 Blue / Prime Video / Random	 Play	 Play / Slow
 4	 4	 Pause	 Pause / Step / Freeze
 5	 5	 <<	 << / Tune-
 6	 6	 >>	 >> / Tune+
 L/R	 Red / Netflix / Search	 USB/Card	 Shift + 8
 7	 7	 Up	 Up
 8	 8	 Menu	 Menu / Home
 9	 9	 Left	 Left
 P/N	 Yellow / YouTube / Repeat	 Enter	 OK
 Repeat	 Green / APP / Repeat	 Right	 Right
 0/10	 0	 Clock	 Sleep / Timer





Original	Replacement
 Down	 Down
 Setup	 Setup / OPT /
 Echo-	 CH- / Page-
 Echo+	 CH+ / Page+
 Mic Vol-	 Shift + Vol-
 Mic Vol+	 Shift + Vol+
 Mic On/Off	 Smart / List
 Treb+	 Shift + Up
 Bass+	 Shift + CH+ /
 Vol+	 Vol+
 Input	 AV / Input / RDS
 Treb-	 Shift + Down
 Bass-	 Shift + CH- /
 Vol-	 Vol-

Original	Replacement

