





Original	Replacement
 Power	 Power
 Open / Close	 Exit
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 10+	 +  Shift + Guide
 Mute	 Mute
 Title/TTX	 Text
 Menu	 Menu
 Display	 Info

Original	Replacement
 Prog / EPG	 Guide
 Prog / EPG	 Sleep
 PBC	 Smart
 GOTO	 Media
 Vol -	 Vol -
 Vol +	 Vol +
 Pause	 Pause
 Play	 Play
 Stop	 Stop
 Setup	 Options
 Return	 Back
 Up	 Up
 Left / Fav-	 Left
 Enter	 Ok
 Right / FAV+	 Right
 Source	 AV
 TV / Radio	 TV/R





	Original	Replacement	Original	Replacement
	<< REV	<<		
	>> FWD	>>		
	I<< Prev	I<<		
	>>I Next	>>I		
	3D	3D		
	Subtitle	Subt		
	Zoom	Eject		
	Mode	Format		
	Digest	D. Menu		
	Language	Dual		
	L / R	Yellow		
	P / N	Blue		
	Repeat	+ Shift + Text		
	A-B	+ Shift + TV/R		
	Angle	+ Shift + Smart		
	Slow	+ Shift + Pause		
	Down	Down		

