


 








 
 


 

 
 

 




 


 




 
 


Original	Replacement	Original	Replacement
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Epg	 +  Shift + Guide	Volume+	 Vol +
App	 Media	CH/Page+	 Ch +
Info	 +  Shift + Info	Volume-	 Vol -
Subt.List	 Subt	Audio	 Dual
Sleep Timer	 Sleep	CH/Page-	 Ch -
TV	 TV/R	1. ?	 1
Text	 Text	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit	Guide Pilote	 Guide



Original	Replacement	Original	Replacement
0/10	0		
FAV Pref.	Pre Ch		
Red	Red		
Green	Green		
Yellow	Yellow		
Blue	Blue		
Alt/16:9	Format		

