

 



 





 



 

 





 











 



 



 

 



 



 

 

 

 

 





 



 






Original	Replacement	Original	Replacement
 Power	 Power	 <<	 << / Tune-
 Open/Close	 Eject / Surround	 >>	 >> / Tune+
 Function	 AV / Input / RDS	 Stop	 Stop / Hold
 1/RDS Display	 1	 Play	 Play / Slow
 2	 2	 Pause	 Pause / Step / Freeze
 3/TA	 3	 Vol+	 Vol+
 4/PTY-	 4	 Mute	 Mute / Dimmer
 5/PTY Search	 5	 Tuning/CH-	 CH- / Page-
 6/PTY+	 6	 Tuning/CH+	 CH+ / Page+
 7	 7	 Vol-	 Vol-
 8	 8	 Tv Sound	 Sound / Title
 9	 9	 S/W Level	 Picture / Format
 Disc Menu	 D.Menu / Top	 Home	 Menu / Home
 0	 0	 Sleep	 Sleep / Timer
 Title Menu PopUp	 Shift + D.Menu / Top Menu	 Tools	 Setup / OPT /
 I<<	 I<< / Preset-	 Up	 Up
 >>I	 >>I / Preset+	 Info	 Info / Angle



 



 



 



 



 

 

 

 

 

 



 

 

 

 



 



 



 



 





 

 

 







Original	Replacement	Original	Replacement
	 Left		
	 OK		
	 Right		
	 Back / Return		
	 Down		
	 Exit / Cancel / Clear		
	 Red / Netflix / Search		
	 Green / APP / Repeat		
	 Yellow / YouTube / Repeat		
	 Blue / Prime Video / Random		
	 Smart / List		
	 Shift + Red / Netflix / Search		
	 Shift + Sound / Title		
	 Audio / Lang I/II		





Original	Replacement	Original	Replacement
 Power	 Power	 Play	 Play / Slow
 Function	 AV / Input / RDS	 Pause	 Pause / Step / Freeze
 1/RDS Display	 1	 Vol+	 Vol+
 2	 2	 Mute	 Mute / Dimmer
 3/TA	 3	 Tuning/CH-	 CH- / Page-
 4/PTY-	 4	 Tuning/CH+	 CH+ / Page+
 5/PTY Search	 5	 Vol-	 Vol-
 6/PTY+	 6	 Tv Sound	 Sound / Title
 7	 7	 Home	 Menu / Home
 8	 8	 Sleep	 Sleep / Timer
 9	 9	 Tools	 Setup / OPT /
 0	 0	 Up	 Up
 I<<	 I<< / Preset-	 Info	 Info / Angle
 >>I	 >>I / Preset+	 Left	 Left
 <<	 << / Tune-	 Enter	 OK
 >>	 >> / Tune+	 Right	 Right
 Stop	 Stop / Hold	 Return	 Back / Return





Original	Replacement	Original	Replacement
	Down		Down
	Exit		Exit / Cancel / Clear
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow/Tuner		Yellow / YouTube / Repeat
	Blue/Mo/St		Blue / Prime Video / Random
	Smart Hub		Smart / List
	Search		Shift + Red / Netflix /

