
 
 

 



 

 
 

 
 
 




 
 
 



 



Original	Replacement	Original	Replacement
	Power		Power
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	-/--		Guide
	Recall		Back
	Vol+		Vol +
	Vol-		Vol -
	Rec		Rec
	Auto		Smart
	CH+		Ch +
	CH-		Ch -
	Display		Info
	TV / Radio		TV/R
	Up		Up
	Down		Down
	Left		Left
	Right		Right
	OK / CH List		Ok
	OK / CH List		List
	Menu		Menu
	Exit		Exit
	Source		AV
	P.Mode		Shift + Format
	S.Mode		Shift + Dual
	Sleep		Sleep





Original	Replacement
 Text	 Text
 Hold	 Shift + Stop
 Index	 D. Menu
 Size	 Eject
 FAV	 Pre Ch
 Subpage	 Shift + Subt
 Play/Pause / Timeshift	 Play
 Play/Pause / Timeshift	 Pause
 Audio	 Dual
 Stop	 Stop
 Reveal	 Media
 Aspect	 Format
 Subtitle	 Subt
 <<	 <<
 >>	 >>
  <<	  <<
 >>	 >>

Original	Replacement
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue	 Blue

