



| | Original | Replacement | | Original | Replacement |
|--|------------|----------------------|--|----------|-------------|
| | Standby | Power | | | |
| | Help | Help / Info | | | |
| | Menu | Menu | | | |
| | Up | Up | | | |
| | Down | Down | | | |
| | Right | Right | | | |
| | Left | Left | | | |
| | Select | Enter | | | |
| | Vol+ | Vol + / Page + | | | |
| | Vol- | Vol - / Page - | | | |
| | Mute | Shift + Blank / Mute | | | |
| | Custom | Mode | | | |
| | Blank | Blank / Mute | | | |
| | Source | Source | | | |
| | Presets | Eco / Aspect | | | |
| | Auto Image | Auto | | | |
| | Resize | Freeze / Timer | | | |

