













 

 







 

 
 
 

 

 





 
 
 
 


 
 




| Original  | Replacement   | Original  | Replacement   |
|---|---|---|---|
|  Power   |  Power                     |  Subtitle        |  Subtitle / EQ               |
|  Eject   |  Eject / Surround          |  I<<             |  I<< / Preset-               |
|  DVD     |  Shift + 2                 |  Step            |  Shift + Pause / Step /      |
|  TUNER   |  Shift + 6                 |  Pause           |  Pause / Step / Freeze       |
|  PORT    |  Shift + Fav / Marker / PC |  >>I             |  >>I / Preset+               |
|  AUX     |  Shift + 7                 |  <<              |  << / Tune-                  |
|  1       |  1                         |  Stop            |  Stop / Hold                 |
|  2       |  2                         |  Play            |  Play / Slow                 |
|  3       |  3                         |  >>              |  >> / Tune+                  |
|  4      |  4                        |  Vol+           |  Vol+                       |
|  5     |  5                       |  Mute          |  Mute / Dimmer             |
|  6     |  6                       |  Tuning+ / CH+ |  CH+ / Page+               |
|  7     |  7                       |  Vol-          |  Vol-                      |
|  8     |  8                       |  Remain        |  Yellow / YouTube / Repeat |
|  9     |  9                       |  Tuning- / CH- |  CH- / Page-               |
|  Audio |  Audio / Lang I/II       |  Menu          |  Menu / Home               |
|  0     |  0                       |  Up            |  Up                        |





| Original  | Replacement   |
|---|---|
|  Return            |  Back / Return               |
|  Left              |  Left                        |
|  Enter             |  OK                          |
|  Right             |  Right                       |
|  Info              |  Info / Angle                |
|  Down              |  Down                        |
|  Exit              |  Exit / Cancel / Clear       |
|  Tuner Memory      |  Blue / Prime Video / Random |
|  Mo / St           |  Shift + Audio / Lang I/II   |
|  Tuner Manual      |  Smart / List                |
|  Tuner Preset     |  Display / Media            |
|  SD / HD         |  Guide / EPG / -/--        |
|  V-H/P / V-Sound |  Setup / OPT /             |
|  P.Bass          |  Red / Netflix / Search    |
|  Sound Edit      |  Sound / Title             |
|  Logo            |  Fav / Marker / PC         |
|  Dimmer          |  Shift + Mute / Dimmer     |

| Original   | Replacement   |
|--|---|
|  Slow       |  Shift + Play /                |
|  Repeat     |  Green / APP / Repeat          |
|  Zoom       |  Zoom / Size                   |
|  CD Ripping |  D.Menu / Top                  |
|  Cancel     |  Shift + Exit / Cancel / Clear |
|  Sleep      |  Sleep / Timer                 |



