

 



 



 




 


 
 









 












 




 

 

 

 




 


 



 

 



 
 


 
 
 
 

 


 

 
 


 
 


 

 




Original		Replacement		Original		Replacement	
	Power		Power		Vol+		Vol +
	Mute		Mute		Vol-		Vol -
	Sleep		Sleep		Left		Left
	Nicam/A2		Dual		Enter		Ok
	Still		Pause		1		1
	16:9		Format		2		2
	NR.		Options		3		3
	Surround		List		4		4
	Picture	 + 	Shift + Format		5		5
	Tv/Av		AV		6		6
	Display		Info		7		7
	Sound	 + 	Shift + Dual		8		8
	Up		Up		9		9
	CH+		Ch +		0		0
	CH-		Ch -		-/--		Guide
	Down		Down		Recall		Pre Ch
	Right		Right		Red		Red





	Original	Replacement	Original	Replacement
	Green	 B		
	Yellow	 C		
	Cyan	 D		
	Index	 E-MANUAL D.MENU		
	Cancel	 CLEAR EXIT		
	Subpage	 AD SUBT		
	Size	 ZOOM		
	Hold			
	Reveal	 TOP MENU MENU		
	PIP Window	 SHIFT +  APP MEDIA		
	PIP Position	 SHIFT +  HOME SMART		
	PIP Swap	 HOME SMART		
	TXT/CC	 REPEAT TEXT		
	PIP Size	 APP MEDIA		
	PIP On/Off	 SHIFT + 