













 


 


 
 







 



 




 
 
 

 
 



 


 
 

 





 



 







Original	Replacement	Original	Replacement
 Power	 Power	 Exit/Back	 Exit
 Mute	 Mute	 Up	 Up
 1	 1	 Left	 Left
 2	 2	 OK	 Ok
 3	 3	 Right	 Right
 4	 4	 Down	 Down
 5	 5	 P+	 Ch +
 6	 6	 P-	 Ch -
 7	 7	 Vol+	 Vol +
 8	 8	 Vol-	 Vol -
 9	 9	 [◀▶]	 PICTURE FORMAT
 0	 0	 → ◻ ←	 SEARCH TV/R
 Recall	 FAV PRE-CH	 [i+] / [≡i]	 DISPLAY INFO
 Source	 TIMER AV	 Text / [≡] / [≡] []	 REPEAT TEXT
 Menu/DVD	 TOP MENU MENU	 [] / [▼]	 []
 Guide	 - / - GUIDE	 [▶] / [I/II]	 PLAY MODE ▶
 [■][■][■]	 ECO 3D	 [▶] / [I/II]	 SOUND DUAL









 



 



 







 




 






 

 
 

 
 
 


 
 
 
 

 



























 




 
 

 


 







Original		Replacement		Original		Replacement	
	◀◀ / [≡◂]		<<				
	◀◀ / [≡◂]		Options				
	▶▶ / Subtitle		Subt				
	▶▶ / Subtitle		>>				
	▲		Smart				
	■ / [≡□]		Stop				
	⏏ / [≡⇕]		Eject				
	⏏ / [≡⇕]		I<<				
	▶▶ / [⊖] [≡X]		>>I				
	▶▶ / [⊖] [≡X]		Back				
	Red		Red				
	Green		Green				
	Yellow		Yellow				
	Blue		Blue				





 






 



 


 




 
 




 
 


 
 
 
 
 







 





 






 
 











Original	Replacement	Original	Replacement
 Power	 Power	 Right	 Right
 Mute	 Mute	 Down	 Down
 1	 1	 Vol+	 Vol +
 2	 2	 Vol-	 Vol -
 3	 3	  / [v]	 Pause
 4	 4	  / I/II	 Play
 5	 5	  / I/II	 Dual
 6	 6	  / [≡●]	 <<<
 7	 7	  / [≡●]	 TV/R
 8	 8	  / Subtitle	 >>>
 9	 9	  / Subtitle	 Subt
 0	 0	  ▲	 Smart
  _ Menu/DVD	  Menu	  ■ / [≡□]	 Stop
  - Exit/Back	  Exit	   / [≡⇅]	 Eject
  - Up	  Up	   / [≡⇅]	 I<<<
  Left	  Left	   / [⊙][≡X]	 >>>I
  OK	  Ok	   / [⊙][≡X]	 Back





Original	Replacement	Original	Replacement
 Power	 Power	 	 Pause
 Mute	 Mute	 	 Play
 1	 1	 	 Dual
 2	 2	 	 <<
 3	 3	 	 TV/R
 4	 4	 	 >>
 5	 5	 	 Subt
 6	 6	 ▲	 Smart
 7	 7	 ■ / [≡] button	 Stop
 8	 8	 	 Eject
 9	 9	 	 I<<
 0	 0	 	 Back
 Source	 AV	 	 >>I
 P+	 Ch +		
 P-	 Ch -		
 Vol-	 Vol -		
 Vol+	 Vol +		

