



Original	Replacement
 Mute	 Mute / Dimmer
 Up	 Up
 Power	 Power
 Left	 Left
 OK / Select	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Info	 Info / Angle
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 Presets	 Smart / List
 0	 0
 P+	 CH+ / Page+
 Return	 Back / Return
 Vol-	 Vol-
 Vol+	 Vol+
 P-	 CH- / Page-
 Swap	 Shift + Back / Return
 TV / DTV	 TV/Radio /
 FAV	 Fav / Marker / PC
 Source	 AV / Input / RDS
 Red / Page+	 Shift + CH+ /
 Red / Page+	 Red / Netflix / Search
 Green / Page-	 Green / APP / Repeat
 Green / Page-	 Shift + CH- /
 Yellow	 Yellow / YouTube / Repeat





Original	Replacement
 Blue	 Blue / Prime Video / Random
 Screen	 Picture / Format
 Lang	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Sleep	 Sleep / Timer
 [ ≡ ]	 Text / Goto
 [ ≡X ]	 Exit / Cancel / Clear
 EPG	 Guide / EPG / -/--
 [ ■ ][■■ ]	 Display / Media

Original	Replacement

