











 




























 





Original	Replacement
 TV	 Shift + 1
 AV.SV	 AV / Input / RDS
 SCART1	 Shift + 3
 PC	 Shift + Fav / Marker / PC
 SCART2	 Shift + 2
 Mute	 Mute / Dimmer
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Exit	 Exit / Cancel / Clear
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 Menu / Enter	 OK
 Menu / Enter	 Menu / Home
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / P-	 Down
 Down / P-	 CH- / Page-

Original	Replacement
 Text	 Text / Goto
 Red	 Red / Netflix / Search
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Green	 Green / APP / Repeat
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +100	 Guide / EPG / -/--
 0	 0
 RTN	 Back / Return





Original	Replacement
	RTN Fav / Marker / PC
	Sound Sound / Title
	PIP Source Up SHIFT + [up arrow]
	Display MEDIA DISPLAY Display / Media
	PIP Position SHIFT + [left arrow]
	PIP On/Off SHIFT + [OK button]
	PIP Size SHIFT + [right arrow]
	APC TOP MENU D.MENU D.Menu / Top
	PIP Source SHIFT + [down arrow]
	ARC OPT-TOOLS SETUP Setup / OPT /
	[square stop button] Stop / Hold
	[play button] Play / Slow
	[TUNE+ button] >> / Tune+
	[STEP-FREEZE button] Pause / Step / Freeze
	[PRESET- button] << / Preset-
	[TUNE- button] << / Tune-
	Sleep TIMER SLEEP Sleep / Timer

Original	Replacement
	Reset LIST SMART Smart / List
	Power Power

