


 


 

 






 



 











 

 




 

 
 


 
 
 




 






	Original	Replacement		Original	Replacement
	Power		Power		Recall
	Mute		Mute		Timer/[≡i]
	[i+]/[?]		Info		Timer/[X]
	A/B/[÷]		TV/R		Vol+
	Input/[÷]		AV		Vol-
	[]		Smart		Prog+
	1		1		Prog-
	2		2		(↔)
	3		3		Menu
	4		4		Up
	5		5		Left
	6		6		OK
	7		7		Right
	8		8		Down
	9		9		[≡]
	0		0		Red/Sound
	-/--		Guide		Green/*
					Back
					List
					Sleep
					Vol +
					Vol -
					Ch +
					Ch -
					Dual
					Menu
					Up
					Left
					Ok
					Right
					Down
					Text
					Red
					Green





Original	Replacement	Original	Replacement
 Yellow	 Yellow		
 Blue/[+]	 Blue		

