 



 



 











 



 
 





 


 
 
 

 
 
 

 
 
 



 







 
 



 



 



 


 
 
 

 

















Original	Replacement	Original	Replacement
 Power	 Power	 Green	 Green
 Input TV	 TV/R	 Yellow	 Yellow
 Input Av	 AV	 Blue	 Blue
 Aspect	 Format	 Text	 Text
 Viera Link	 Smart	 STTL	 Subt
 Option	 Options	 Index	 Media
 Direct TV Rec	 Rec	 Hold	 Shift + Stop
 Guide	 Guide	 1	 1
 Exit	 Exit	 2	 2
 Up	 Up	 3	 3
 Left	 Left	 4	 4
 OK	 Ok	 5	 5
 Right	 Right	 6	 6
 Down	 Down	 7	 7
 Menu	 Menu	 8	 8
 Return	 Back	 9	 9
 Red	 Red	 0 / VCR	 0

 



 

 





 
 

 

 








Original		Replacement		Original		Replacement	
	i		Info				
	Mute		Mute				
	CH+		Ch +				
	CH-		Ch -				
	Vol+		Vol +				
	Vol-		Vol -				
	DVD Power		Shift + Power				
	DVD Rec		Shift + Rec				
	DVD		Shift + Ch -				
	DVD		Shift + Ch +				
	DVD << / I<<		<<				
	DVD << / I<<		I<<				
	DVD >> / >>I		>>				
	DVD >> / >>I		>>I				
	DVD Stop		Stop				
	DVD Pause / Step		Pause				
	DVD Play		Play				

 



 

 




 
 













Original	Replacement	Original	Replacement
 Power DVD	 Power		
 Rec DVD	 Rec		
 Programme Down	 Ch -		
 Programme Up	 Ch +		
 I<< DVD	 I<<		
 << DVD	 <<		
 >>I DVD	 >>I		
 >> DVD	 >>		
 Stop DVD	 Stop		
 Pause/Step DVD	 Pause		
 Play DVD	 Play		





Original		Replacement		Original		Replacement	
	VCR Power		Power				
	VCR Rec		Rec				
	VCR		Ch -				
	VCR		Ch +				
	VCR << / I<<		<<				
	VCR << / I<<		I<<				
	VCR >> / >>I		>>				
	VCR >> / >>I		>>I				
	VCR Stop		Stop				
	VCR Pause / Step		Pause				
	VCR Play		Play				

