





















 





 



 

 




 
 

 





 





 

 

 






 
 

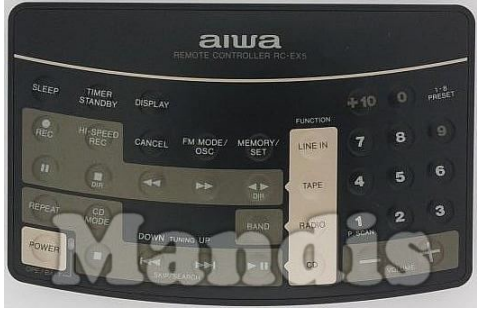 




Original		Replacement		Original		Replacement	
	Sleep		Sleep / Timer		>> / Tune+		>> / Tune+
	Timer Standby		Shift + Sleep / Timer		4		4
	Display		Display / Media		5		5
	+10		Guide / EPG / -/--		6		6
	0		0		<> Dir		Shift + Play /
	Rec		Rec / Rec Mode		Tape		Shift + 5
	Hi-Speed Rec		Shift + Rec / Rec Mode		Repeat		Green / APP / Repeat
	Cancel		Exit / Cancel / Clear		CD Mode		Picture / Format
	7		7		1/P.Scan		1
	8		8		2		2
	9		9		3		3
	FM Mode/OSC		Zoom / Size		Power		Power
	Memory/Set		OK		Band		Shift + 6
	Line In		Shift + 2		Radio		TV/Radio /
	Pause		Pause / Step / Freeze		Stop		Stop / Hold
	Stop Dir		Shift + Stop /		I<< Skip/Search/Tuning		I<< / Preset-
	<<		<< / Tune-		>>I Skip/Search/Tuning		>>I / Preset+





Original	Replacement	Original	Replacement
 Play/Pause	 Play / Slow		
 CD	 Shift + 3		
 Volume-	 Vol-		
 Volume+	 Vol+		

