



| Original | Replacement |
|--|--|
|  Mute |  Mute / Dimmer |
|  Power |  Power |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  Freeze |  Shift + Pause / Step / |
|  0 |  0 |
|  Aspect Ratio |  D.Menu / Top |
|  Guide |  Guide / EPG / -/-- |
|  ? |  Shift + Info / Angle |
|  TXT |  Text / Goto |

| Original | Replacement |
|---|--|
|  OPT |  Setup / OPT / |
|  Back |  Back / Return |
|  Up |  Up |
|  Left |  Left |
|  OK |  OK |
|  Right |  Right |
|  Down |  Down |
|  Menu |  Menu / Home |
|  Exit |  Exit / Cancel / Clear |
|  Info |  Info / Angle |
|  Vol+ |  Vol+ |
|  ↑ Page+ |  Shift + Up |
|  CH+ |  CH+ / Page+ |
|  Vol- |  Vol- |
|  ↓ Page- |  Shift + Down |
|  CH- |  CH- / Page- |
|  Red |  Red / Netflix / Search |





| Original | Replacement | Original | Replacement |
|---|---|----------|-------------|
|  | Green  Green / APP / Repeat | | |
|  | Yellow  Yellow / YouTube / Repeat | | |
|  | Blue  Blue / Prime Video / Random | | |
|  | TV/R  TV/Radio / | | |
|  | SUB  Subtitle / EQ | | |
|  | LANG  Audio / Lang I/II | | |
|  |  Sleep / Timer | | |
|  | Rec  Rec / Rec Mode | | |
|  | Play  Play / Slow | | |
|  | Pause  Pause / Step / Freeze | | |
|  | Stop  Stop / Hold | | |
|  | <<  << / Tune- | | |
|  | I<  I<< / Preset- | | |
|  | >I  >>I / Preset+ | | |
|  | >>  >> / Tune+ | | |
| | | | |
| | | | |

