



Original	Replacement	Original	Replacement
 Power	 Power	 --	 Guide / EPG / -/--
 Up / P+	 Up	 0	 0
 Up / P+	 CH+ / Page+	 P < P	 Fav / Marker / PC
 Menu	 Menu / Home	 PP	 Back / Return
 Left	 Left	 Vol+	 Vol+
 Right	 Right	 I-II	 Audio / Lang I/II
 Down / P-	 Down	 Mute	 Mute / Dimmer
 Down / P-	 CH- / Page-	 Vol-	 Vol-
 1	 1	 Info	 Info / Angle
 2	 2	 Red	 Red / Netflix / Search
 3	 3	 Green	 Green / APP / Repeat
 4	 4	 Yellow	 Yellow / YouTube / Repeat
 5	 5	 Blue	 Blue / Prime Video / Random
 6	 6	 [TV]	 Shift + 1
 7	 7	 [TV]	 TV/Radio /
 8	 8	 [AV]	 AV / Input / RDS
 9	 9	 [ ≡ ]	 Text / Goto




**Original**
**Replacement**

	[≡☉]		Subtitle / EQ
	[ /≡]		Picture / Format
	[≡X]		Exit / Cancel / Clear
	[≡⇕]		Zoom / Size
	[≡?]		Display / Media
	[≡i]		Smart / List







 

 

 

 
 
 

 

















**Original**
**Replacement**








Original	Replacement
 Power	 Power
 Up / P+	 Up
 Up / P+	 CH+ / Page+
 Menu	 Menu / Home
 Left	 Left
 Select	 OK
 Right	 Right
 Down / P-	 CH- / Page-
 Down / P-	 Down
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 +10	 Guide / EPG / -/-
 0	 0
 Repeat	 Green / APP / Repeat
 Search	 Red / Netflix / Search
 A→B	 Yellow / YouTube / Repeat
 Display	 Display / Media
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Zoom	 Zoom / Size
 Prog	 TV/Radio /
 C	 Blue / Prime Video / Random
 Angle	 Info / Angle
 Return	 Back / Return
 Time	 Sleep / Timer
 << / Tune-	 << / Tune-
 >> / Tune+	 >> / Tune+







































Original	Replacement	Original	Replacement
<b>⏮</b>	I<< / Preset-		
<b>⏭</b>	>>I / Preset+		
<b>▶/⏸</b>	Play / Slow		
<b>⏸</b>	Pause / Step / Freeze		
<b>■</b>	Stop / Hold		
<b>⏹</b>	Title		
<b>⏸</b>	Sound / Title		
<b>⏸</b>	Open / Close		
	Eject / Surround		



































Original	Replacement	Original	Replacement







Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9

Original	Replacement	Original	Replacement
On/Off	 Power	Menu Right	 Right
Mute	 Mute / Dimmer	Menu Down	 Down
Txt Stop	 Stop / Hold	Back	 Back / Return
Tone+	 >> / Tune+	Volume+	 Vol+
Lang	 Sound / Title	Chan.Up	 CH+ / Page+
Menu audio	 Audio / Lang I/II	Volume-	 Vol-
Subt.List	 Subtitle / EQ	Display	 Display / Media
Txt Expand	 Zoom / Size	Chan.Down	 CH- / Page-
Sleep Timer	 Sleep / Timer	1	 1
Return TV	 TV/Radio /	2	 2
Menu video	 D.Menu / Top	3	 3
Text	 Text / Goto	4	 4
Menu	 Menu / Home	5	 5
Menu Up	 Up	6	 6
Info	 Info / Angle	7	 7
Menu Left	 Left	8	 8
OK Enter	 OK	9	 9





Original	Replacement	Original	Replacement
Guide -/-- 1.	Guide / EPG / -/--		
0/10	0		
2.Fav P/C 2.	Fav / Marker / PC		
Red	Red / Netflix / Search		
Green	Green / APP / Repeat		
Yellow	Yellow / YouTube / Repeat		
Blue	Blue / Prime Video / Random		
Lang	Shift + Audio / Lang I/II		

Original	Replacement

