








 





 

 





 
 






 


 







 





 



 
 
 
 




Original	Replacement	Original	Replacement
	Power		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	FAV		Fav / Marker / PC
	0		0
	TXT		Text / Goto
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original	Replacement	Original	Replacement
	Exit		Exit / Cancel / Clear
	?		D.Menu / Top
	@		Smart / List
	Menu		Menu / Home
	Up		Up
	Back		Back / Return
	Left		Left
	OK		OK
	Right		Right
	Tools		Setup / OPT /
	Down		Down
	Guide		Guide / EPG / -/--
	Vol+		Vol+
	Source		AV / Input / RDS
	P+		CH+ / Page+
	Vol-		Vol-
	Mute		Mute / Dimmer





Original	Replacement	Original	Replacement
 P-	 CH- / Page-		
 I<	 I<< / Preset-		
 >I	 >>I / Preset+		
 <<	 << / Tune-		
 >>	 >> / Tune+		
 Rec	 Rec / Rec Mode		
 Play	 Play / Slow		
 Pause	 Pause / Step / Freeze		
 Stop	 Stop / Hold		
 3D	 Picture / Format		
 ..0	 Zoom / Size		
 [...].	 Subtitle / EQ		
 Netflix	 Shift + Red / Netflix /		
 My Media	 Display / Media		

