



Original	Replacement
Sleep	Sleep / Timer
Power Receiver	Power
Dimmer	Shift + Mute / Dimmer
Speakers A	Sound / Title
Speakers B	Audio / Lang I/II
COAX 1	Shift + 1
COAX 2	Shift + 2
OPT 1	Shift + 4
OPT 2	Shift + 5
LINE 1	Red / Netflix / Search
LINE 2	Yellow / YouTube / Repeat
LINE 3	Blue / Prime Video / Random
PHONO	Shift + Guide / EPG / -/-
TUNER	Shift + 6
CD	Shift + 3
USB	Shift + 8
NET	Shift + Fav / Marker / PC

Original	Replacement
FM	TV/Radio /
AM	AV / Input / RDS
Preset+	Shift + >>I / Preset+
Tuning+	CH+ / Page+
Memory	Info / Angle
Preset-	Shift + I<< / Preset-
Tuning-	CH- / Page-
Shuffle	Smart / List
Repeat	Green / APP / Repeat
Mode	Picture / Format
Home	Menu / Home
Now Playing	Eject / Surround
Setup	Setup / OPT /
Up	Up
Option	Shift + Setup / OPT / Tools
Volume+	Vol+
Left	Left





Original	Replacement
Enter	OK
Right	Right
Volume-	Vol-
Display	Display / Media
Down	Down
Return	Back / Return
Mute	Mute / Dimmer
Stop	Stop / Hold
Pause	Pause / Step / Freeze
Play	Play / Slow
<<	<< / Tune-
>>	>> / Tune+
I<<	I<< / Preset-
>>I	>>I / Preset+
1	1
2	2
3	3

Original	Replacement
4	4
5	5
6	6
7	7
8	8
9	9
0	0
+10	Guide / EPG / -/-
ENT.	Fav / Marker / PC

