




 

















Original	Replacement
 Power	 Power
 Eject	 Eject / Surround
 Mute	 Mute / Dimmer
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Nicam	 Audio / Lang I/II
 Aspect	 Shift + Picture / Format
 1	 1
 2	 2
 3	 3
 Red	 Red / Netflix / Search
 4	 4
 5	 5
 6	 6
 Green / Goto	 Shift + Text /
 Green / Goto	 Green / APP / Repeat
 7	 7

Original	Replacement
 8	 8
 9	 9
 Yellow / Angle	 Shift + Info / Angle
 Yellow / Angle	 Yellow / YouTube / Repeat
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 Recall	 Back / Return
 Blue / D.Dis	 Blue / Prime Video / Random
 Blue / D.Dis	 Shift + Display / Media
 Up / PR+	 CH+ / Page+
 Up / PR+	 Up
 Left / Vol-	 Left
 Left / Vol-	 Vol-
 OK	 OK
 Right / Vol+	 Right
 Right / Vol+	 Vol+
 Down / PR-	 CH- / Page-





Original	Replacement
 Down / PR-	 Down
 Source	 AV / Input / RDS
 Sleep	 Sleep / Timer
 Info	 Info / Angle
 Menu	 Menu / Home
 Repeat / TXT	 Text / Goto
 Repeat / TXT	 Shift + Green / APP / REPEAT
 A-B / Hold	 Shift + Stop /
 A-B / Hold	 Shift + Yellow / YouTube / REPEAT A-B
 Language / Mix	 Shift + Audio / Lang I/II
 Subtitle /	 Subtitle / EQ
 Setup / Index	 Setup / OPT /
 DVD Menu /	 D.Menu / Top
 DVD Menu /	 Shift + Zoom /
 Title / Reveal	 Shift + Sound / Title
 Zoom / Cancel	 Zoom / Size
 Zoom / Cancel	 Shift + Exit / Cancel / Clear

Original	Replacement
 Play/Pause / EPG	 Play / Slow
 Play/Pause / EPG	 Guide / EPG / -/-
 Play/Pause / EPG	 Pause / Step / Freeze
 Stop / List	 Stop / Hold
 Stop / List	 Smart / List
 << / DTV/Radio	 << / Tune-
 << / DTV/Radio	 TV/Radio /
 >> / FAV	 >> / Tune+
 >> / FAV	 Fav / Marker / PC
 I<< / Page	 I<< / Preset-
 >>I / Page Up	 >>I / Preset+
 Exit	 Exit / Cancel / Clear
 D.Vol+ / FAV+	 Shift + Vol+
 Rec	 Rec / Rec Mode
 Media	 Display / Media
 Still	 Shift + Pause / Step /
 D.Vol- / FAV-	 Shift + Vol-

