





| Original | Replacement |
|--|--|
|  Power |  Power |
|  Mute |  Mute / Dimmer |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |
|  8 |  8 |
|  9 |  9 |
|  TV / Radio |  TV/Radio / |
|  0 |  0 |
|  ←PR |  Back / Return |
|  EPG |  Guide / EPG / -/-- |
|  Up / PR+ |  Up |
|  Up / PR+ |  Shift + Up |

| Original | Replacement |
|---|--|
|  Menu |  Menu / Home |
|  Left / Vol- |  Shift + Left |
|  Left / Vol- |  Left |
|  OK / List |  OK |
|  OK / List |  Shift + OK |
|  Right / Vol+ |  Shift + Right |
|  Right / Vol+ |  Right |
|  Info |  Info / Angle |
|  Down / PR- |  Shift + Down |
|  Down / PR- |  Down |
|  Exit |  Exit / Cancel / Clear |
|  Red / Audio |  Shift + Red / Netflix / |
|  Red / Audio |  Red / Netflix / Search |
|  Page+ |  CH+ / Page+ |
|  Yellow / Subtitle |  Shift + Yellow / YouTube / |
|  Yellow / Subtitle |  Yellow / YouTube / Repeat |
|  Page- |  CH- / Page- |





| Original | Replacement |
|-------------|------------------------------|
| Green / TXT | Shift + Green / APP / Repeat |
| Green / TXT | Green / APP / Repeat |
| Pause | Pause / Step / Freeze |
| Blue / L/R | Blue / Prime Video / Random |
| :: | Text / Goto |
| FAV | Fav / Marker / PC |
| UHF | Setup / OPT / |
| PAL / NTSC | D.Menu / Top |
| Record | Rec / Rec Mode |
| Play | Play / Slow |
| Stop | Stop / Hold |
| TV / AV | AV / Input / RDS |
| << | << / Tune- |
| >> | >> / Tune+ |
| < Seek | Shift + << / |
| Seek > | Shift + >> / |

| Original | Replacement |
|----------|-------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

