




 



 

 









 

























 


 



 



 
 

 





| Original | Replacement |
|--|---|
|  Open / Close |  Eject / Surround |
|  Power |  Power |
|  V.Mode |  Picture / Format |
|  Title |  Sound / Title |
|  Subtitle |  Subtitle / EQ |
|  Menu |  Menu / Home |
|  Repeat |  Green / APP / Repeat |
|  A-B RPT |  Yellow / YouTube / Repeat |
|  Angle |  Info / Angle |
|  Audio |  Audio / Lang I/II |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  7 |  7 |

| Original | Replacement |
|--|--|
|  8 |  8 |
|  9 |  9 |
|  OSD |  Display / Media |
|  N/P |  Red / Netflix / Search |
|  0 |  0 |
|  Setup |  Setup / OPT / |
|  Up |  Up |
|  Intro |  OK |
|  Left |  Left |
|  Play |  Play / Slow |
|  Right |  Right |
|  Zoom |  Zoom / Size |
|  Down |  Down |
|  Prog |  TV/Radio / |
|  CH+ |  CH+ / Page+ |
|  Rec |  Rec / Rec Mode |
|  CH- |  CH- / Page- |





| Original | Replacement |
|--------------|-----------------------------|
| Timer | Sleep / Timer |
| Quality | Blue / Prime Video / Random |
| Disc | D.Menu / Top |
| << | << / Tune- |
| >> | >> / Tune+ |
| I<< | I<< / Preset- |
| >>I | >>I / Preset+ |
| Pause / Step | Pause / Step / Freeze |
| Stop | Stop / Hold |
| <I Slow | + Shift + Left |
| Slow I> | + Shift + Right |
| DVD | + Shift + 2 |
| Mute | Mute / Dimmer |
| Volume- | Vol- |
| Volume+ | Vol+ |
| Source | AV / Input / RDS |
| Book Mark | Fav / Marker / PC |

| Original | Replacement |
|-----------|--------------|
| Edit | Text / Goto |
| Chap Mark | Smart / List |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

