


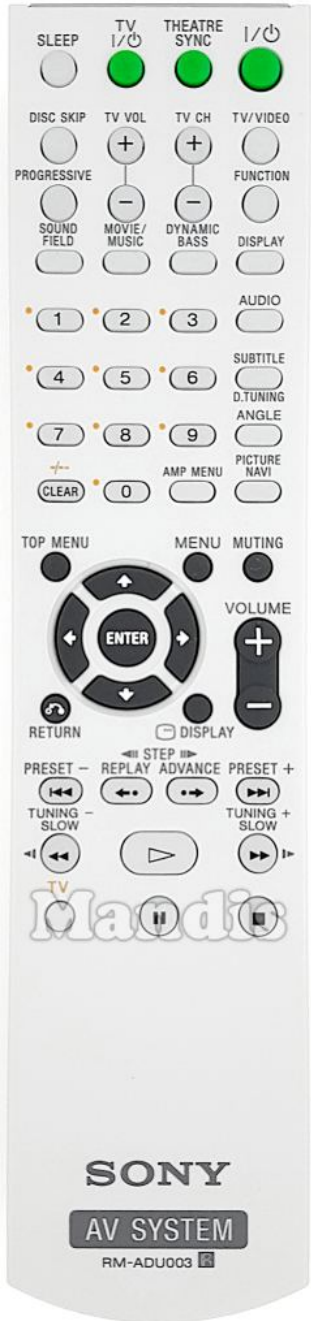




 





 






 
 

 
 








 




| Original | Replacement | Original | Replacement |
|---------------|---------------|--------------------|-------------|
| Power | Power | I>/>>/Tuning+ | >> |
| Power Theatre | Shift + Power | I<</Preset- | I<< |
| Menu | Menu | >>I/Preset+ | >>I |
| Top Menu | Shift + Menu | [*] Display | Info |
| Return | Back | <-/Replay/<II Step | Ch - |
| Muting | Mute | Step II>/Advance/→ | Ch + |
| Volume+ | Vol + | Clear | Exit |
| Volume- | Vol - | Disc Skip | Pre Ch |
| Up | Up | 1 | 1 |
| Enter | Ok | 2 | 2 |
| Down | Down | 3 | 3 |
| Right | Right | 4 | 4 |
| Left | Left | 5 | 5 |
| Play | Play | 6 | 6 |
| Pause | Pause | 7 | 7 |
| Stop | Stop | 8 | 8 |
| <</<I/Tuning- | << | 9 | 9 |





| Original | | Replacement | | Original | | Replacement | |
|---|----------|---|-------|----------|--|-------------|--|
|  | Power |  | Power | | | | |
|  | 1 |  | 1 | | | | |
|  | 2 |  | 2 | | | | |
|  | 3 |  | 3 | | | | |
|  | 4 |  | 4 | | | | |
|  | 5 |  | 5 | | | | |
|  | 6 |  | 6 | | | | |
|  | 7 |  | 7 | | | | |
|  | 8 |  | 8 | | | | |
|  | 9 |  | 9 | | | | |
|  | 0 |  | 0 | | | | |
|  | -/-- |  | Guide | | | | |
|  | TV Vol+ |  | Vol + | | | | |
|  | TV Vol- |  | Vol - | | | | |
|  | TV CH+ |  | Ch + | | | | |
|  | TV CH- |  | Ch - | | | | |
|  | Tv/Video |  | TV/R | | | | |

