





 



 





 

 



 



 











Original	Replacement
	 Power
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Setup / OPT /
	 Guide / EPG / -/--
	 Up
	 Left
	 OK
	 Right
	 Down
	 Menu / Home
	 Text / Goto
	 Vol+
	 CH+ / Page+
	 Vol-

Original	Replacement
	 Mute / Dimmer
	 CH- / Page-
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 AV / Input / RDS
	 0
	 Back / Return
	 << / Tune-
	 Exit / Cancel / Clear
	 Stop / Hold








Original		Replacement		Original		Replacement	
	Play		Play / Slow				
	>>		>> / Tune+				
	Rec		Rec / Rec Mode				
	[i+]		Info / Angle				
	[12]		Display / Media				
	FAV		Fav / Marker / PC				





Original	Replacement
 Power	 Power
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8

Original	Replacement
 9	 9
 0	 0
 P↔P	 Fav / Marker / PC
 <<	 << / Tune-
 Stop/Cancel	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Back	 Back / Return
 Pause	 Pause / Step / Freeze





Original	Replacement
 Power	 Power
 Red/Demo	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Guide	 Guide / EPG / -/--
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right
 Down	 Down
 Menu	 Menu / Home
 Teletext	 Text / Goto
 P+	 CH+ / Page+
 P-	 CH- / Page-
 1	 1
 2	 2

Original	Replacement
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 P↔P	 Fav / Marker / PC
 <<	 << / Tune-
 Stop/Cancel	 Stop / Hold
 Play	 Play / Slow
 >>	 >> / Tune+
 Rec	 Rec / Rec Mode
 Info	 Info / Angle
 [12]	 Zoom / Size
 Subtitle	 Subtitle / EQ





Original

Replacement

Back		Back / Return
Pause		Pause / Step / Freeze

Original

Replacement

