



Original	Replacement
Standby	Power
OPEN/CLOSE	Eject
SUBTITLE	Subt
AUDIO	Dual
ANGLE	Format
PS/IS	3D
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
SETUP	Options
0	0

Original	Replacement
GOTO	Guide
ENTER	Ok
MUTE	Mute
CH+	Ch +
TITLE	List
CH-	Ch -
MENU	Menu
VOL+	Vol +
SOURCE	AV
UP	Up
RIGHT	Right
VOL-	Vol -
LEFT	Left
DOWN	Down
DISC OP	Shift + Options
DISPLAY	Info
TIMER	Shift + AV





Original	Replacement	Original	Replacement
REC/OTR	Rec	REPEAT	Text
PLAY	Play	>>/FF	>>
PAUSE/STEP	Pause	PROGRAM	Sleep
I<</PREV	I<<	QUALITY	Yellow
STOP	Stop	A-B	Shift + Text
EDIT	Red	ADD/CLEAR	Exit
FINALIZE	Green	DV/USB	Shift + Media
ERASE	Shift + Exit		
RETURN	Back		
HDD/DUB	Shift + Smart		
TIMESHIFT	Pre Ch		
DVD	Smart		
>>I/NEXT	>>I		
TV	Media		
SORT/SLOW	Blue		
<</FB	<<		
ZOOM	Shift + Eject		

