
 





 


 
 





Original		Replacement		Original		Replacement	
	POWER		Power		GUIDE		Guide
	MENU		Menu		UP		Up
	LAST		Pre Ch		OK		Ok
	MUTE		Mute		DOWN		Down
	TEXT		Text		LEFT		Left
	MODE		TV/R		RIGHT		Right
	1		1		VOL+		Vol +
	2		2		VOL-		Vol -
	3		3		PR-		Ch -
	6		6		PR+		Ch +
	5		5		SWAP		Shift + Green
	4		4		ZOOM		Eject
	7		7		RED / MOSAIC		Red
	8		8		BACK		Back
	9		9		GREEN / SLEEP		Green
	FAV		Shift + Pre Ch		YELLOW /		Yellow
	0		0		BLUE / LIST		Blue





Original	Replacement	Original	Replacement
PAGE DOWN	Shift + Ch -		
PAGE UP	Shift + Ch +		
TIME SHIFT	Smart		
STOP	Stop		
REC	Rec		
REW	<<		
PLAY / PAUSE	Play		
FWD	>>		
PLAY / PAUSE	Pause		
OPTION	Options		
PIP	Shift + Red		
TIMER	AV		
MEDIA	Media		
PAUSE	Shift + Yellow		
V. FORMAT	Format		
INFO	Info		

Original	Replacement	Original	Replacement

