


 








Original	Replacement
	 Power
	 Display / Media
	 Setup / OPT /
	 Mute / Dimmer
	 Menu / Home
	 Sound / Title
	 Fav / Marker / PC
	 Zoom / Size
	 TV/Radio /
	 Info / Angle
	 Vol-
	 Vol+
	 Guide / EPG / -/-
	 Back / Return
	 Up
	 Left
	 OK

Original	Replacement
	 Right
	 Down
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 9
	 Picture / Format
	 0
	 Text / Goto
	 Rec / Rec Mode
	 Play / Slow
	 Stop / Hold





Original		Replacement		Original		Replacement	
	Timer		Sleep / Timer				
	Pause/Step		Pause / Step / Freeze				
	I>/Slow		Eject / Surround				
	I<<		I<< / Preset-				
	Rec List		Smart / List				
	←/INS Replay		CH- / Page-				
	→/CM Skip		CH+ / Page+				
	>>I		>>I / Preset+				
	A-B		Yellow / YouTube / Repeat				
	Subtitle		Subtitle / EQ				
	Repeat		Green / APP / Repeat				
	<<		<< / Tune-				
	F1		D.Menu / Top				
	Source		AV / Input / RDS				
	Audio		Audio / Lang I/II				
	>>		>> / Tune+				

