















 

 

 











 
















 







 



 

 









 



 













 
 












Original	Replacement	Original	Replacement
 [ ]→	 Exit / Cancel / Clear	 [≡]	 Text / Goto
 Power	 Power	 Left	 Left
 [1 2]	 Shift + Red / Netflix /	 OK	 OK
 [← →]	 Shift + Green / APP /	 Right	 Right
 [  > <  ]	 Shift + Yellow / YouTube /	 [> <]	 Pause / Step / Freeze
 Red / Rec	 Rec / Rec Mode	 Down	 Down
 Red / Rec	 Red / Netflix / Search	 [...]	 Subtitle / EQ
 Green / <<	 Green / APP / Repeat	 Vol+	 Vol+
 Green / <<	 << / Tune-	 Mute	 Mute / Dimmer
 Yellow / Stop	 Stop / Hold	 P+	 CH+ / Page+
 Yellow / Stop	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue / Play	 Blue / Prime Video / Random	 P-	 CH- / Page-
 Blue / Play	 Play / Slow	 1	 1
 White / >>	 >> / Tune+	 2	 2
 White / >>	 Fav / Marker / PC	 3	 3
 [   ]	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5





	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[⊙]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		





 



 





Original	Replacement	Original	Replacement
	SHIFT +  Shift + 2		Vol+
	Red / Netflix / Search		Mute / Dimmer
	Green / APP / Repeat		CH+ / Page+
	Yellow / YouTube / Repeat		Vol-
	<< / Tune-		CH- / Page-
	Stop / Hold		1
	Play / Slow		2
	>> / Tune+		3
	SHIFT +  Shift + Guide / EPG / -/-		4
	Up		5
	Text / Goto		6
	Left		7
	OK		8
	Right		9
	Pause / Step / Freeze		Info / Angle
	Down		0
	Subtitle / EQ		Guide / EPG / -/-
















 














 












 











 


 





Original	Replacement	Original	Replacement
 Smart Sound	 Sound / Title		
 [ <> ]	 D.Menu / Top		
 Smart Picture	 Picture / Format		
 Instant Rec	 Rec / Rec Mode		
 Setup / OPT /	 Setup / OPT /		







 



 













 
 












Original	Replacement	Original	Replacement
 [ ]→	 Exit / Cancel / Clear	 [≡]	 Text / Goto
 Power	 Power	 Left	 Left
 [1 2]	 Shift + Red / Netflix /	 OK	 OK
 [← →]	 Shift + Green / APP /	 Right	 Right
 [   >   <   ]	 Shift + Yellow / YouTube /	 [ >   < ]	 Pause / Step / Freeze
 Red / Rec	 Red / Netflix / Search	 Down	 Down
 Red / Rec	 Rec / Rec Mode	 [...]	 Subtitle / EQ
 Green / <<	 Green / APP / Repeat	 Vol+	 Vol+
 Green / <<	 << / Tune-	 Mute	 Mute / Dimmer
 Yellow / Stop	 Stop / Hold	 P+	 CH+ / Page+
 Yellow / Stop	 Yellow / YouTube / Repeat	 Vol-	 Vol-
 Blue / Play	 Blue / Prime Video / Random	 P-	 CH- / Page-
 Blue / Play	 Play / Slow	 1	 1
 White / >>	 Fav / Marker / PC	 2	 2
 White / >>	 >> / Tune+	 3	 3
 [   ]	 Shift + Guide / EPG / -/-	 4	 4
 Up	 Up	 5	 5



 






 



 


 







 













 


 
























 





	Original	Replacement	Original	Replacement
	6	 6		
	7	 7		
	8	 8		
	9	 9		
	[i+]	 Info / Angle		
	0	 0		
	P<P / -/--	 Guide / EPG / -/--		
	[Ⓞ]	 Sleep / Timer		
	[?]	 AV / Input / RDS		
	[↑↓] / Zoom	 Zoom / Size		
	Smart Sound	 Sound / Title		
	[ <> ]	 D.Menu / Top		
	Smart Picture	 Picture / Format		
	Instant Rec	 Shift + Rec / Rec Mode		
	I-II	 Audio / Lang I/II		
	DNR	 Back / Return		
	[ ]	 Setup / OPT /		







 









 












Original	Replacement	Original	Replacement
 [ ]→	 CLEAR EXIT CANCEL Exit / Cancel / Clear		 Down
 Power	 Power	 [...]	 EQ SUBTITLE Subtitle / EQ
 [1 2]	 NETFLIX SEARCH Red / Netflix / Search	 Vol+	 + VOL Vol+
 [← →]	 APP REPEAT Green / APP / Repeat	 Mute	 DIMMER MUTE Mute / Dimmer
 [   > < ]	 YouTube REPEAT A-B Yellow / YouTube / Repeat	 P+	 + CH PAGE CH+ / Page+
 Rec	 REC MODE REC / Rec Mode	 Vol-	 VOL - Vol-
 <<	 TUNE- << / Tune-	 P-	 - CH PAGE CH- / Page-
 Stop	 HOLD Stop / Hold	 1	 TV 1 1
 Play	 SLOW Play / Slow	 2	 DVD 2 2
 >>	 TUNE+ >> / Tune+	 3	 CD - STB 3 3
 [   ]	 SHIFT + GUIDE EPG Shift + Guide / EPG / -/-	 4	 VIDEO 4 4
 Up	 Up	 5	 TAPE 5 5
 [≡]	 GOTO TEXT Text / Goto	 6	 TUNER 6 6
 Left	 Left	 7	 AUX - HDD 7 7
 OK	 OK	 8	 USB 8 8
 Right	 Right	 9	 BLUETOOTH 9 9
 [> <]	 STEP - FREEZE II Pause / Step / Freeze	 [i+]	 ANGLE INFO Info / Angle





Original	Replacement	Original	Replacement
	0		0
	P<P / -/--		Guide / EPG / -/--
	[ⓐ]		Sleep / Timer
	[?]		AV / Input / RDS
	[⇅] / Zoom		Zoom / Size
	Smart Sound		Sound / Title
	[ <> ]		D.Menu / Top
	Smart Picture		Picture / Format
	Instant Rec	 + 	Shift + Rec / Rec Mode
	I-II		Audio / Lang I/II
	DNR		Back / Return
	[🎛️]		Setup / OPT /

