



	Original	Replacement		Original	Replacement
	Power		Power		CH.List
	Source		AV		P+
	HDMI		TV/R		P-
	1		1		Mute
	2		2		Content
	3		3		Menu
	4		4		Guide
	5		5		Tools
	6		6		Info/Clock
	7		7		Return
	8		8		Exit
	9		9		Up
	0		0		Down
	TTX/MIX		Text		Right
	PRE-CH		Pre Ch		Left
	Vol+		Vol +		Enter
	Vol-		Vol -		Red
					List
					Ch +
					Ch -
					Mute
					D. Menu
					Menu
					Guide
					Options
					Info
					Back
					Exit
					Up
					Down
					Right
					Left
					Ok
					Red





Original	Replacement	Original	Replacement
 Green	 Green		
 Yellow	 Yellow		
 Blue	 Blue		
 Home	 Smart		
 3D	 3D		
 Dual I-II	 Dual		
 Alarm	 Media		
 P.Size	 Format		
 Subt.	 Subt		
 <<	 <<		
 I<<	 I<<		
 Pause	 Pause		
 >>I	 >>I		
 >>	 >>		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		

