

 
 

 

 



 
 
 

 

 



 





 



 




Original	Replacement	Original	Replacement
On/Off	 Power	1	 1
Mute	 Mute	2	 2
Sleep Timer	 Sleep	3	 3
Return TV	 TV/R	4	 4
Text	 Text	5	 5
TV/AV	 AV	6	 6
Menu	 Menu	7	 7
Menu Up	 Up	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0
Menu Down	 Down	2.Fav P/C 2.	 Pre Ch
Volume+	 Vol +	Red	 Red
Chan.Up	 Ch +	Green	 Green
Volume-	 Vol -	Yellow	 Yellow
Menu audio	 Dual	Blue	 Blue
Chan.Down	 Ch -	AV 2	 Shift + AV



Original	Replacement	Original	Replacement
Camera	HOME SMART		Smart

