 





 


 

 

 




 







Original	Replacement	Original	Replacement
	Left		Deck <
	Muting		Deck >
	CD Play		Left
	CD Pause		Right
	CD Stop		Menu Down
	CD <<		Master Vol+
	CD >>		CH Select
	CD I<<		Tuner Channel+
	CD >>I		Master Vol-
	T.Tone		Tuner Channel-
	PHONO		TV/DBS
	Surround		DVD/VDP
	Mode		CD
	System Setup		VCR
	AVR/AVC		MD / TAPE MON
	Menu Next		TUNER
	Menu Up		TUNER
			Deck A/B
			Deck Stop
			Yellow / YouTube / Repeat
			Shift + Stop / Hold







 


 








 
 
 

 



 
 





 

 

 







Original	Replacement	Original	Replacement
			
Deck <<	Shift + << /		
			
Deck >>	Shift + >> /		
			
Status	Shift + Setup / OPT / Tools		
			
CH Vol Up	Shift + Vol+		
			
CD Disc Skip+	Shift + CH+ /		
			
CH Vol Down	Shift + Vol-		
			
Video Select	Shift + 4		
			
Tuner Shift	Shift + 6		







































Original		Replacement		Original		Replacement	
	AVR/AVC		AV / Input / RDS		DVD I<<		I<< / Preset-
	Power VCR		Power		DVD Pause		Pause / Step / Freeze
	Power DVD		Shift + Power		DVD >>I		>>I / Preset+
	PHONO		Shift + Sound / Title		DVD Display		Display / Media
	CD		3		DVD Stop		Stop / Hold
	DVD/VDP		2		DVD Return		Back / Return
	TV/DBS		1		DVD Setup		Setup / OPT /
	VCR		4		Up		Up
	MD / TAPE MON		5		Select		OK
	TUNER		9		Master Vol+		Vol+
	TUNER		6		Left		Left
	Tuner Shift		Shift + 6		Down		Down
	Tuner Channel+		CH+ / Page+		Right		Right
	Tuner Channel-		CH- / Page-		Master Vol-		Vol-
	DVD Title		Sound / Title		T.Tone		Audio / Lang I/II
	DVD Play		Play / Slow		Video Select		Shift + 4
	DVD Menu / Guide		Menu / Home		Mode		D.Menu / Top





Original	Replacement	
Muting		Mute / Dimmer
MD Play		Play / Slow
MD Pause		Pause / Step / Freeze
Deck Stop		Stop / Hold
Deck <<		<< / Tune-
Deck >>		>> / Tune+
MD I<<		I<< / Preset-
MD >>I		>>I / Preset+
T.Tone		Sound / Title
PHONO		Audio / Lang I/II
Surround		Eject / Surround
Mode		D.Menu / Top
System Setup		Setup / OPT /
AVR/AVC		AV / Input / RDS
Menu Next		Menu / Home
Menu Up		Up
Deck <		Left

Original	Replacement	
Deck >		Right
Menu Down		Down
Master Vol+		Vol+
CH Select		Smart / List
Tuner Channel+		CH+ / Page+
Master Vol-		Vol-
Tuner Channel-		CH- / Page-
TV/DBS		1
DVD/VDP		2
CD		3
VCR		4
MD / TAPE MON		5
TUNER		6
TUNER		9
Deck A/B		Yellow / YouTube / Repeat
MD Stop		Shift + Stop /
MD <<		Shift + << /

Tune-





Original	Replacement	
MD >>	SHIFT + TUNE+	Shift + >> /
Status	SHIFT + OPT-TOOLS / SETUP	Shift + Setup / OPT / Tools
CH Vol Up	SHIFT + VOL +	Shift + Vol+
CH Vol Down	SHIFT + VOL -	Shift + Vol-
Video Select	SHIFT + VIDEO 4	Shift + 4
Tuner Shift	SHIFT + TUNER 6	Shift + 6

Original	Replacement

