

 
 
 

 
 
 









 
 

 
 

 

 
 
 

 
 
 
 
 
 
 
 
 

 
 
 
 







 





	Original	Replacement		Original	Replacement
	Power		Power		<<
	1		1		>>
	2		2		<<
	Eject/Open-Close		Eject		Stop
	VCR		Smart		Play
	DVD		Media		Pause/Step
	3		3		Disc Menu/List
	4		4		Home
	5		5		Shift + Smart
	6		6		Display
	7		7		Return
	8		8		Enter
	9		9		Up
	0		0		PR/CH/TRK+
	Clear		Exit		Ch +
	AV/Input		AV		Ch -
	>>		>>		Down
					Right
					Left



