






 


































































 














Original		Replacement		Original		Replacement	
	Mute		Mute / Dimmer		6		6
	Power		Power		A/B		Shift + Yellow / YouTube /
	(↔)		Audio / Lang I/II		7		7
	TV		TV/Radio /		8		8
	∨		Sound / Title		9		9
	[#]→		Picture / Format		Output		AV / Input / RDS
	[.≡]		Text / Goto		-/--		Guide / EPG / -/--
	[≡+]		Shift + Stop /		0		0
	[≡◆]		Shift + Zoom /		C		Exit / Cancel / Clear
	[≡x]⊙		Back / Return		IN 123		D.Menu / Top
	[≡?][+]		Sleep / Timer		1-/TP Off		Fav / Marker / PC
	1		1		C00		Setup / OPT /
	2		2		2-/TP On		Shift + Fav / Marker / PC
	3		3		Vol+		Vol+
	[≡i]		Info / Angle		Prog+		CH+ / Page+
	4		4		Vol-		Vol-
	5		5		Prog-		CH- / Page-


















Original	Replacement
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Display / Media
	Left
	Right
	Zoom / Size
	Menu / Home
	Smart / List
	OK
	Up
	Subtitle / EQ
	>>I / Preset+
	Shift + Right
	Down
	Shift + CH+ /

Original	Replacement
	I<< / Preset-
	Shift + Left
	Shift + Power
	Shift + CH- /
	<< / Tune-
	Play / Slow
	>> / Tune+
	Stop / Hold
	Pause / Step / Freeze





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		
 >>	 >> / Tune+		
 Play	 Play / Slow		
 <<	 << / Tune-		













Original	Replacement	Original	Replacement
Power Down	Power		
Prog+ Down	CH+ / Page+		
Prog- Down	CH- / Page-		
Stop	Stop / Hold		
Pause	Pause / Step / Freeze		
Rec	Rec / Rec Mode		
>>	>> / Tune+		
Play	Play / Slow		
<<	<< / Tune-		





Original	Replacement	Original	Replacement
 Power Down	 Power		
 Prog+ Down	 CH+ / Page+		
 Prog- Down	 CH- / Page-		
 <<<	 <<< / Tune-		
 Play	 Play / Slow		
 >>>	 >>> / Tune+		
 Stop	 Stop / Hold		
 Pause	 Pause / Step / Freeze		
 Rec	 Rec / Rec Mode		

