 

 

 
 
 
 
 
 
 
 
 

 

 

 

 
 

 
 

 


 
 

 
 
 

 
 
 

 

 

 

 
 
 

 
 


 







 
 
 
 

 




Original	Replacement	Original	Replacement
	MUTE		Mute
	POWER		Power
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	TEXT		Text
	HOLD		Shift + Stop
	SUBPAGE		Subt
	FAV		Pre Ch
	AUDIO		Dual
	MENU		Menu
	UP		Up
	INPUT		AV
	LEFT		Left
	OK		Ok
	RIGHT		Right
	BACK		Back
	DOWN		Down
	EXIT		Exit
	VOL+		Vol +
	SLEEP		Sleep
	CH+		Ch +
	VOL-		Vol -
	CH-		Ch -
	RED		Red
	GREEN		Green
	YELLOW		Yellow





Original	Replacement
 BLUE	 Blue
 S.MODE	 +  Shift + Dual
 S	 Smart
 MIX	 +  Shift + Text
 SIZE	 Eject
 RETURN	 +  Shift + Back
 GUIDE	 Guide
 TV/RADIO	 TV/R
 PLAY	 Play
 PAUSE	 Pause
 STOP	 Stop
 RECORD	 Rec
 PREV	 I<<
 NEXT	 >>I
 REW	 <<
 FWD	 >>
 INDEX	 D. Menu

Original	Replacement
 LIST	 List
 INFO	 Info
 P.MODE	 +  Shift + Format
 REVEAL	 Media
 PROG	 +  Shift + Sleep
 ASPECT	 Format

