





















 

















 





 





 



 















Original	Replacement	Original	Replacement
 On	 Power	 Muting	 Mute / Dimmer
 Standby	 Shift + Power	 Level Down	 CH- / Page-
 Sleep	 Sleep / Timer	 Level Up	 CH+ / Page+
 Return	 Back / Return	 I<<	 I<< / Preset-
 Setup	 Setup / OPT /	 Play	 Play / Slow
 Disc+	 Shift + CH+ /	 >>I	 >>I / Preset+
 Up	 Up	 <<	 << / Tune-
 Vol+	 Vol+	 Stop	 Stop / Hold
 Disc-	 Shift + CH- /	 >>	 >> / Tune+
 Left	 Left	 Rec / Random	 Rec / Rec Mode
 Enter	 OK	 Pause / Play Rev.	 Pause / Step / Freeze
 Right	 Right	 Open / Close	 Shift + Eject / Surround
 Vol-	 Vol-	 Input Sel. DVD	 2
 Down	 Down	 Input Sel. CD	 3
 Audio	 Audio / Lang I/II	 Input Sel. V1	 1
 CH Sel	 Smart / List	 Input Sel. V2	 4
 Test	 Text / Goto	 Input Sel. T1	 5





Original		Replacement	
	Input Sel. T2		8
	Input Sel. V3		7
	Input Sel. V4		9
	Input Sel. TUN		6
	Input Sel. PH		0
	Stereo		Sound / Title
	Direct		Red / Netflix / Search
	DSP ▶		Shift + Right
	SURR		Eject / Surround
	A.ST		Green / APP / Repeat
	◀ DSP		Shift + Left
	SP A		Yellow / YouTube / Repeat
	SP B		Blue / Prime Video / Random
	Re-EQ		Subtitle / EQ
	Display		Display / Media
	Dimmer		Shift + Mute / Dimmer
	Zone 2		AV / Input / RDS

Original		Replacement	





Original	Replacement
ON	Power
STDBY	Shift + Power
Return	Back / Return
Setup	Setup / OPT /
Disc+	CH+ / Page+
Up	Up
Vol+	Vol+
Disc-	CH- / Page-
Left	Left
Enter	OK
Right	Right
Vol-	Vol-
Down	Down
Top Menu	D.Menu / Top
Menu	Menu / Home
Muting	Mute / Dimmer
Angle	Info / Angle

Original	Replacement
Subtitle	Subtitle / EQ
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2
3	3
4	4
5	5
6	6
7	7





	Original	Replacement	Original	Replacement
		8		8
		9		9
		+10		Guide / EPG / -/--
		0		0
		Search		Red / Netflix / Search





Original	Replacement
ON	Power
STDBY	Shift + Power
Disc+	CH+ / Page+
Vol+	Vol+
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround
1	1
2	2

Original	Replacement
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0





Original	Replacement
ON	Power
STDBY	Shift + Power
Vol+	Vol+
Enter	OK
Enter	Fav / Marker / PC
Vol-	Vol-
Muting	Mute / Dimmer
I<<	I<< / Preset-
Play	Play / Slow
>>I	>>I / Preset+
<<	<< / Tune-
Stop	Stop / Hold
>>	>> / Tune+
Rec / Random	Rec / Rec Mode
Rec / Random	Blue / Prime Video / Random
Pause	Pause / Step / Freeze
Open / Close	Eject / Surround

Original	Replacement
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/-
0	0

