






 








 










 

 








Original	Replacement
 Power	 Power
 Sleep	 Sleep
 Mute	 Mute
 Timer	 AV
 EPI	 Guide
 SUBTL	 Subt
 Audio	 Shift + Dual
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Original	Replacement
 16:9	 Format
 Lang	 Dual
 RCL	 Back
 FAV	 Pre Ch
 Page+ / Timeshift	 Shift + Ch +
 Page- / V-Format	 Shift + Ch -
 Page- / V-Format	 Shift + Format
 Up / CH+	 Up
 Up / CH+	 Ch +
 Down / CH-	 Down
 Down / CH-	 Ch -
 Right / Vol+	 Right
 Right / Vol+	 Vol +
 Left / Vol-	 Left
 Left / Vol-	 Vol -
 OK	 Ok
 Menu	 Menu





Original	Replacement
	 Info
	 Text
	 Exit
	 Red
	 Green
	 Eject
	 Yellow
	 Shift + Pause
	 Blue
	 TV/R
	
	
	 Play
	 Pause
	 Stop
	 I<<
	 >>I

Original	Replacement
	 Shift + Play
	 Rec
	 Media
	 Smart
	 Shift + Smart
	 Shift + Media

