














 

 






Original	Replacement
	Mute / Dimmer
	Power
	Sleep / Timer
	Vol+
	Subtitle / EQ
	Shift + Sleep / Sleep / Timer
	Vol-
	D.Menu / Top
	TV/Radio /
	Blue / Prime Video / Random
	OK
	Green / APP / Repeat
	Play / Slow
	Pause / Step / Freeze
	I<< / Preset-
	>>I / Preset+
	Stop / Hold

Original	Replacement
	CH- / Page-
	CH+ / Page+
	Sound / Title

