



Original	Replacement	Original	Replacement
 Power	 Power	 9	 9
 Subtitle	 Subt	 0	 0
 Audio	 Dual	 +10	 Shift + Guide
 Eject	 Eject	 Goto	 3D
 DVD	 Shift + 1	 Up / CH+	 Up
 TV	 Shift + 2	 Up / CH+	 Ch +
 AV	 AV	 Down / CH-	 Down
 FM/AM	 Media	 Down / CH-	 Ch -
 DVB-T	 Shift + 3	 Left	 Left
 1	 1	 OK	 Ok
 2	 2	 Right	 Right
 3	 3	 DVD/DVB Setup	 Options
 4	 4	 Time	 Sleep
 5	 5	 Slow	 Shift + Play
 6	 6	 Set	 Smart
 7	 7	 LCD Setup	 Shift + Options
 8	 8	 LCD On/Off	 Shift + Power



