


 

 
 
 

 



 
 
 
 
 

 



 

 

 





 









Original	Replacement
 Power	 Power
 ShowView	 3D
 AV	 AV
 Direct Tv Rec	 TV/R
 Rec	 Rec
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 Guide
 Cancel	 Exit

Original	Replacement
 CH+	 Ch +
 CH-	 Ch -
 Vol+	 Vol +
 Vol-	 Vol -
 HDD	 Media
 DVD	 Smart
 << Slow/Search	 <<
 Slow/Search >>	 >>
 Stop	 Stop
 Pause	 Pause
 Play	 Play
 Top Menu / Direct Navigator	 D. Menu
 Menu / Play List	 Menu
 Up	 Up
 Left	 Left
 Enter	 Ok
 Right	 Right














 
 
 


 
 







 

 

 
 







	Original	Replacement
	Down	 Down
	Functions	 Options
	Return	 Back
	Prog/Check	 Sleep
	Timer	 +  Shift + AV
	Display	 Info
	Time Slip	 Text
	Dubbing	 Subt
	Rec Mode	 +  Shift + Rec
	I<< Skip	 I<<
	Skip >>I	 >>I
	A/Input Select	 Eject
	B/Status	 List
	C/AV Link	 Yellow
	D/Manual Skip	 Format
	Erase	 Dual
	Audio	 +  Shift + Dual

	Original	Replacement
	Position	 Green
	Marker	 Pre Ch





	Original	Replacement		Replacement
	Power		Power	Power
	CH+		Ch +	Ch +
	CH-		Ch -	Ch -
	1		1	1
	2		2	2
	3		3	3
	4		4	4
	5		5	5
	6		6	6
	7		7	7
	8		8	8
	9		9	9
	0		0	0
	-/--		Guide	Guide
	A		Red	Red
	B		Green	Green
	C		Yellow	Yellow

	Original	Replacement		Replacement
	D		Blue	

