



Original	Replacement	Original	Replacement
Power	Power	OK	Ok
Sub-T	Subt	FAV	Pre Ch
TTX	Text	Exit	Exit
Mute	Mute	Tv/Radio	TV/R
Goto	Smart	Recall	Back
Repeat	Shift + Text	Info	Info
EPG	Guide	1	1
Lang	Dual	2	2
Menu	Menu	3	3
Page+	Ch +	4	4
Page-	Ch -	5	5
Up/CH+	Up	6	6
Down/CH-	Down	7	7
Right	Right	8	8
Vol+	Vol +	9	9
Vol-	Vol -	0	0
Left	Left	<<	<<









Original	Replacement	Original	Replacement
Standby	Power	Right / Vol +	Vol +
Sub-T	Subt	Left / Vol -	Left
TTX	Text	Left / Vol -	Vol -
Mute	Mute	OK	Ok
EPG	Guide	FAV	Shift + Pre Ch
Lang	Dual	TV / Radio	TV/R
GOTO	Shift + Guide	Recall	Pre Ch
Repeat	Shift + Text	Info	Info
Page +	Shift + Up	1	1
Page -	Shift + Down	2	2
Menu	Menu	3	3
Exit	Exit	4	4
Up / CH +	Up	5	5
Up / CH +	Ch +	6	6
Down / CH -	Down	7	7
Down / CH -	Ch -	8	8
Right / Vol +	Right	9	9





Original	Replacement	Original	Replacement
0	0		
<< Rev	<<		
>> Fwd	>>		
I<< Prev	I<<		
>>I Next	>>I		
Play	Play		
Pause / Timeshift	Pause		
Stop	Stop		
Rec	Rec		
Red / PVR	Red		
Green / V-Format	Green		
Green / V-Format	Format		
Yellow / Aspect	Yellow		
Yellow / Aspect	Shift + Format		
Blue / Timer	Blue		
Blue / Timer	AV		

