













 
 



 



 







 





 
 


 





 










Original	Replacement	Original	Replacement
 Power	 Power	 Vol+	 Vol +
 Dimmer	 Media	 Vol-	 Vol -
 USB-DAC	 1	 Mute	 Mute
 AUX	 2	 Back	 Back
 iPod/USB	 3	 Setup	 Options
 OPT1	 4	 Up	 Up
 OPT2	 5	 Down	 Down
 Coax	 6	 Right	 Right
 I<<	 I<<	 Left	 Left
 Play	 Play	 Enter	 Ok
 Pause	 Pause		
 >>I	 >>I		
 Stop	 Stop		
 Random	 Smart		
 Repeat	 Text		
 Mode	 Format		
 Info	 Info		

