



Original	Replacement	Original	Replacement
 Open/Close	 Eject / Surround	 13	 Shift + 3
 Continue	 Smart / List	 14	 Shift + 4
 Shuffle	 Blue / Prime Video / Random	 15	 Shift + 5
 PGM	 Display / Media	 16	 Shift + 6
 PGM	 TV/Radio /	 17	 Shift + 7
 1	 1	 18	 Shift + 8
 2	 2	 19	 Shift + 9
 3	 3	 20	 Shift + 0
 4	 4	 >20	 Guide / EPG / -/-
 5	 5	 Clear Repeat	 Exit / Cancel / Clear
 6	 6	 Clear Repeat	 Green / APP / Repeat
 7	 7	 A↔B	 Yellow / YouTube / Repeat
 8	 8	 Auto Space	 Red / Netflix / Search
 9	 9	 I<<	 I<< / Preset-
 10	 0	 >>I	 >>I / Preset+
 11	 Shift + 1	 Play	 Play / Slow
 12	 Shift + 2	 Fader	 Mute / Dimmer





	Original	Replacement	Original	Replacement
	← Index	CH- / Page-		
	Index →	CH+ / Page+		
	Pause	Pause / Step / Freeze		
	Line Out Volume+	Vol+		
	<<	<< / Tune-		
	>>	>> / Tune+		
	Stop	Stop / Hold		
	Line Out Volume-	Vol-		
	<< Slow	Left		
	Slow >>	Right		

