


 




 





 
 







Original	Replacement
 Standby/on	 Power
 Open/Close	 Eject
 One Touch	 TV/R
 HDD	 Media
 DVD	 Smart
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 Input Select	 AV
 Channel+	 Ch +

Original	Replacement
 Channel-	 Ch -
 Clear	 Exit
 Red/Audio	 Red
 Green/Subtitle	 Green
 Yellow/Angle	 Yellow
 Blue/Play Mode	 Blue
 Disc Navigator/Top	 List
 Up	 Up
 Down	 Down
 Right	 Right
 Left	 Left
 Enter	 Ok
 Play List / Menu	 Menu
 Home Menu	 D. Menu
 Return	 Back
 Guide	 Guide
 Info	 Info



