 







 

 

 

 

 

 

 

 

 

 

 



 
 


 
 



 
 

 
 


 
 


 
 
 
 
 
 
 
 
 
 
 
 
 


 
 


 

 
 
 







Original	Replacement	Original	Replacement
 DVD/VHS Power	 Power	 0	 0
 Drive Select	 Media	 */Delete/Reset	 Shift + Exit
 TV Power	 Shift + Power	 Input Select	 AV
 TV AV	 Shift + AV	 CH+/Tracking/V-Lo	 Ch +
 TV CH+	 Shift + Ch +	 CH-/Tracking/V-Lo	 Ch -
 TV CH-	 Shift + Ch -	 ShowView	 Smart
 TV Vol+	 Vol +	 Prog / Check	 Sleep
 TV Vol-	 Vol -	 I<< Skip/Index	 I<<
 1	 1	 Skip/Index >>I	 >>I
 2	 2	 <<	 <<
 3	 3	 Slow/Search/Rew	 >>
 4	 4	 Stop	 Stop
 5	 5	 Pause	 Pause
 6	 6	 Play	 Play
 7	 7	 i/Status	 Info
 8	 8	 Exit	 Exit
 9	 9	 Guide	 Guide





Original	Replacement
 Direct Navigator	 D. Menu
 Function Menu	 Menu
 Up	 Up
 Down	 Down
 Right / II>	 Right
 Left / <II	 Left
 OK	 Ok
 Option	 Options
 Return	 Back
 Red	 Red
 Green	 Green
 Yellow / Create Chapter	 Yellow
 Blue / Manual Skip	 Blue
 Rec	 Rec
 Rec Mode	 Shift + Rec
 Ext Link	 Text
 Direct Tv Rec	 TV/R

Original	Replacement
 Audio	 Dual
 STTL	 Subt
 Display	 Shift + Info
 Time Slip / << Jet Rew	 Shift + <<
 Time Slip / << Jet Rew	 Format

