

 


 






 







 










 









 













 












 
 








 

 
 


 
 

 

 





 




Original	Replacement	Original	Replacement
 Power	 Power	 0/I.Skip	 0
 USB	 Media	 Bookmark	 Guide
 Power Tv	 Shift + Power	 Step	 Options
 Video Sel	 Smart	 <<	 <<
 HDMI Sel	 AV	 I.Replay	 3D
 Repeat	 Text	 Pause	 Pause
 A-B Repeat	 Shift + Text	 >>	 >>
 Open/Close	 Eject	 I<<	 I<<
 1	 1	 Stop	 Stop
 2	 2	 Play	 Play
 3	 3	 >>I	 >>I
 4	 4	 Tv Vol+	 Vol +
 5	 5	 Tv Vol-	 Vol -
 6	 6	 Tv/Video	 TV/R
 7	 7	 Tv CH+	 Ch +
 8	 8	 Tv CH-	 Ch -
 9	 9	 Menu	 Menu





Original	Replacement	Original	Replacement
 Return	 Back		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Enter	 Ok		
 Disc Menu	 D. Menu		
 EZ View	 Format		
 Exit	 Exit		
 Cancel	 Pre Ch		
 Subtitle	 Subt		
 Audio	 Dual		
 Info	 Info		
 Zoom	 Shift + Eject		

Original	Replacement

