






















 



 



 

 





Original	Replacement
 Power	 Power
 Tv/Rad	 TV/Radio /
 Search/*	 Shift + Red / Netflix /
 Subtitle	 Subtitle / EQ
 *	 Setup / OPT /
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0

Original	Replacement
 .../*	 Display / Media
 Vol+	 Vol+
 FAV//Quic Acces/*	 Fav / Marker / PC
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 CH-	 CH- / Page-
 Mute	 Mute / Dimmer
 Text	 Text / Goto
 Home	 Menu / Home
 T.Opt.	 Shift + Setup / OPT / Tools
 Back	 Back / Return
 Up	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 OK	 OK
 Right	 Right





Original		Replacement	
	AD/*		Audio / Lang I/II
	Down		Down
	Q.Menu/*		D.Menu / Top
	Movies		Picture / Format
	Rec/*		Rec / Rec Mode
	Stop		Stop / Hold
	<<		<< / Tune-
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random

Original		Replacement	

