





 

 

 


 
 
 




















Original	Replacement
	 Power
	 Mute / Dimmer
	 Red / Netflix / Search
	 Green / APP / Repeat
	 Yellow / YouTube / Repeat
	 Blue / Prime Video / Random
	 Zoom / Size
	 Subtitle / EQ
	 Shift + Sleep / Timer
	 Shift + 8
	 TV/Radio /
	 Text / Goto
	 Smart / List
	 Sleep / Timer
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold

Original	Replacement
	 Rec / Rec Mode
	 Menu / Home
	 Up
	 Exit / Cancel / Clear
	 Left
	 OK
	 Right
	 Guide / EPG / -/-
	 Down
	 Info / Angle
	 I<< / Preset-
	 Audio / Lang I/II
	 << / Tune-
	 >> / Preset+
	 Shift + 0
	 >> / Tune+
	 1





Original	Replacement	Original	Replacement
2 ABC	2	DVD 2	2
3 DEF	3	CD - STB 3	3
4 GHI	4	VIDEO 4	4
5 JKL	5	TAPE 5	5
6 MNO	6	TUNER 6	6
7 PQRS	7	AUX - HDD 7	7
8 TUV	8	USB 8	8
9 WXYZ	9	BLUETOOTH 9	9
FAV	FAV	PC FAV MARKER	Fav / Marker / PC
0	0	HDMI - BAT 0	0
RECALL	Recall	RETURN BACK	Back / Return

Original	Replacement	Original	Replacement

